




CHEMICAL PUMP & FILTER
WITH ACID-ALKALI RESISTANCE
EXPERT IN R&D AND MANUFACTURING

Stainless Steel Centrifugal Pump

Model : QHS

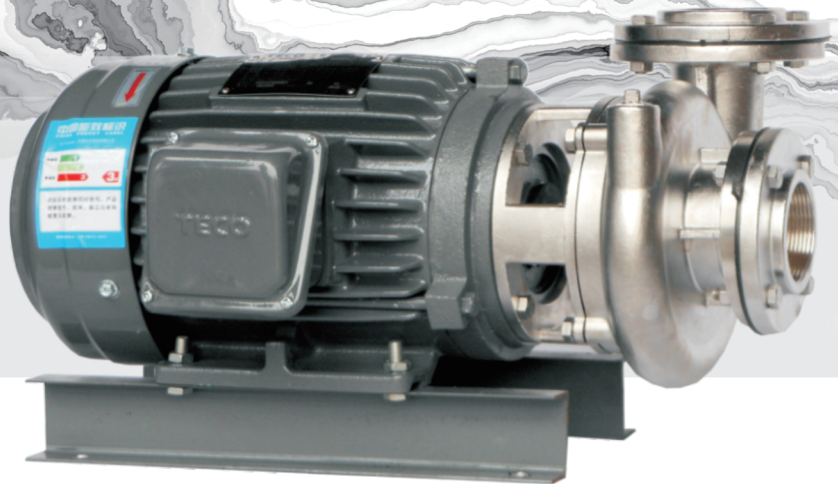


Workshop &
Warehouse






Stainless Steel Centrifugal Pump [QHS Series]

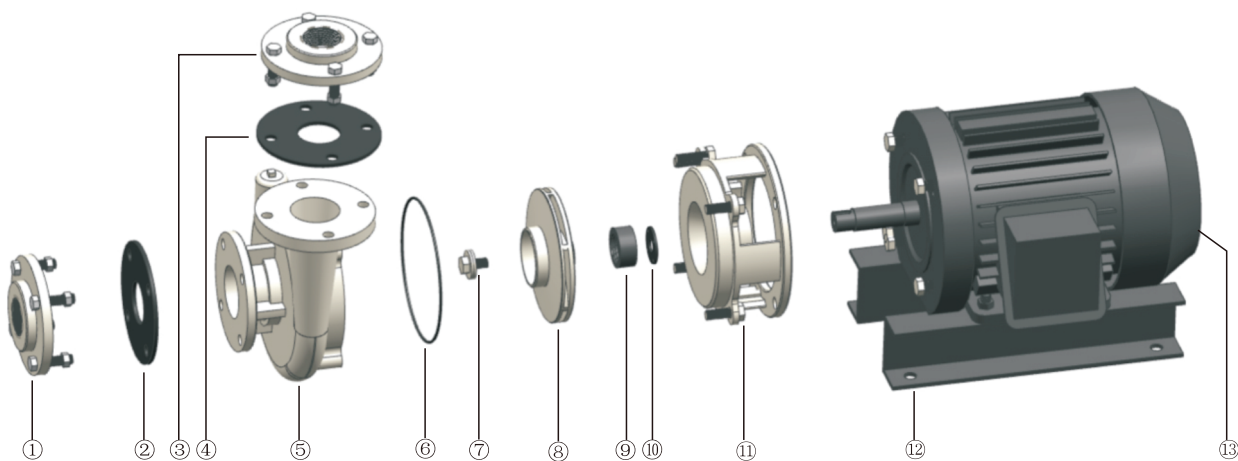

- | | |
|-----------------|--------------------|
| ① Inlet Flange | ⑧ Impeller |
| ② Inlet Gasket | ⑨ Front Shaft Seal |
| ③ Outlet Flange | ⑩ Rear Shaft Seal |
| ④ Outlet Gasket | ⑪ Connecting Base |
| ⑤ Front Cover | ⑫ Frame |
| ⑥ O-Ring | ⑬ Motor |
| ⑦ Impeller Nut | |

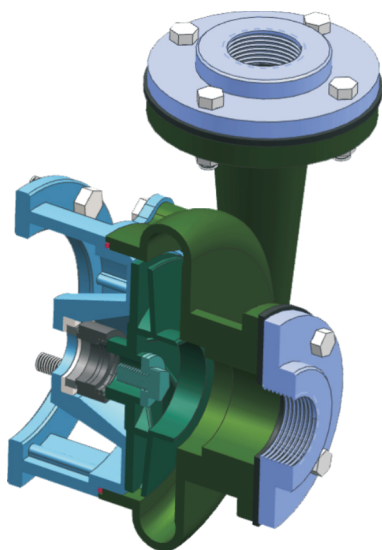

Product Characteristics

1. The pump is applicable to general pure water industry, surface treatment, food industry and chemical industry.
2. The user can select SUS304 or SUS316 pump body material and shaft seal type according to chemical requirements.
3. The main body of the pump is made of high-quality materials by precision casting, with a firm and compact structure.

Product Advantages

1. Unique technology, low noise, high efficiency, corrosion resistance, long service life;
2. Patented technology, CE, SGS quality certification of European Union, and government designated supplier;
3. High temperature resistance, suitable for many kinds of liquid, high cost-effective;
4. 4-pole motor centrifugal pump to solve the problem of rapid temperature rise of liquid;
5. Optional protection device, which can prevent the shaft seal from being damage due to dry-running;
6. Secondary energy efficiency, energy conservation and environmental protection (customized);
7. SUS304 or SUS316 material, with high temperature and corrosion resistance, etc.



Model Description

QHS - 50 - 2 - S - 6 - P - 5 - V38 - A - K - A - B - S
① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩ ⑪ ⑫ ⑬

- ① Model No.: QHS
- ② Inlet And Outlet Caliber: 25-25mm; 40-40mm; 50-50mm; 65-65mm; 80-80mm; 100-100mm; 125-125mm; 150-150mm
- ③ Power: 1/2-1/2HP; 1-1HP; 2-2HP; 3-3HP; 5-5HP; 7.5-7.5HP; 10-10HP; 15-15HP; 20-20HP;
- ④ Shaft Seal Material: S-SSIC
- ⑤ Pump Body Material: 4-SUS304; 6-SUS316
- ⑥ Sealing Material: P-PTFE
- ⑦ Frequency: 5-50HZ; 6-60HZ
- ⑧ Voltage: V38-3Ø/380V; V41-3Ø/415V; V44-3Ø/440V; V48-3Ø/480V; V66-3Ø/660V; V32-3Ø/220V; V22-1Ø/220V
- ⑨ Specific Gravity Of Liquid: A-1. 0-1.2; B-1. 3; C-1. 4; D-1. 5; E-1. 6; F-1. 7; G-1. 8; H-1. 9; I-2.0
- ⑩ Motor Brand: K-Kelida; Q-Other
- ⑪ Motor Requirements: A-IE3 Normal Motor; B-IE4 Normal Motor; C-IE5 Normal Motor; D-Variable Frequency Motor; E-IE3, BT4 Ex-Proof Motor; F-IE4, BT4 Ex-Proof Motor; G-IE5, BT4 Ex-Proof Motor; H-IE3, CT4 Ex-Proof Motor; I-IE4, CT4 Ex-Proof Motor; J-IE5, CT4 Ex-Proof Motor; K-Permanent magnet variable frequency motor; L-BT4 Ex-Proof Variable Frequency Motor; M-CT4 Ex-Proof Variable Frequency Motor
- ⑫ Motor Protection Level: A-IP54; B-IP55; C-IP56; D-IP65
- ⑬ S-Standard; N-Non-Standard


Product Specification

Total head (H) = meter (M) water yield Q = liter / minute (L / MIN) or cubic meter / hour (M³/H)

No.	Model	Power		In&Outlet Size	Rotational Speed	Max Head (50Hz)	Max Flow (50Hz)	
		HP	KW	DN25	R/MIN	M	L/MIN	M³/H
1	QHS-25-0.5	0.5	0.37	DN25	2850	14	150	9
2	QHS-25-1	1	0.75	DN25	2850	14	200	12
3	QHS-40-1	1	0.75	DN40	2850	14	250	15
4	QHS-40-2	2	1.5	DN40	2850	17.5	383	23
5	QHS-50-2	2	1.5	DN50	2850	17.5	500	30
6	QHS-50-3	3	2.2	DN50	2850	20	500	30
7	QHS-65-3	3	2.2	DN65	2850	20	600	36
8	QHS-50-5	5	3.7	DN50	2850	23	633	38
9	QHS-65-5	5	3.7	DN65	2850	23	700	42
10	QHS-80-7.5	7.5	5.5	DN80	2850	27	1033	62
11	QHS-100-7.5	7.5	5.5	DN100	2850	27	1533	92
12	QHS-80-10	10	7.5	DN80	2850	31	1033	62
13	QHS-100-10	10	7.5	DN100	2850	27	1800	108
14	QHS-100-15	15	11	DN100	2850	31	1866	112
15	QHS-125-15	15	11	DN125	2850	27	2700	162
16	QHS-100-20	20	15	DN100	2850	35	2133	128
17	QHS-125-20	20	15	DN125	2850	27	3050	183

●Medium temperature: 0℃~80℃, medium specific gravity: 1-2, working environment temperature: -5℃~50℃, maximum usage altitude: 2000m, maximum working pressure: 5Bar. Test basis: The above performance data corresponds to the normal speed of transportation of clean water at 25℃. The performance error is ± 5%. The performance of a pump varies with the specific gravity and temperature of the fluid medium being transported.


Size Specification

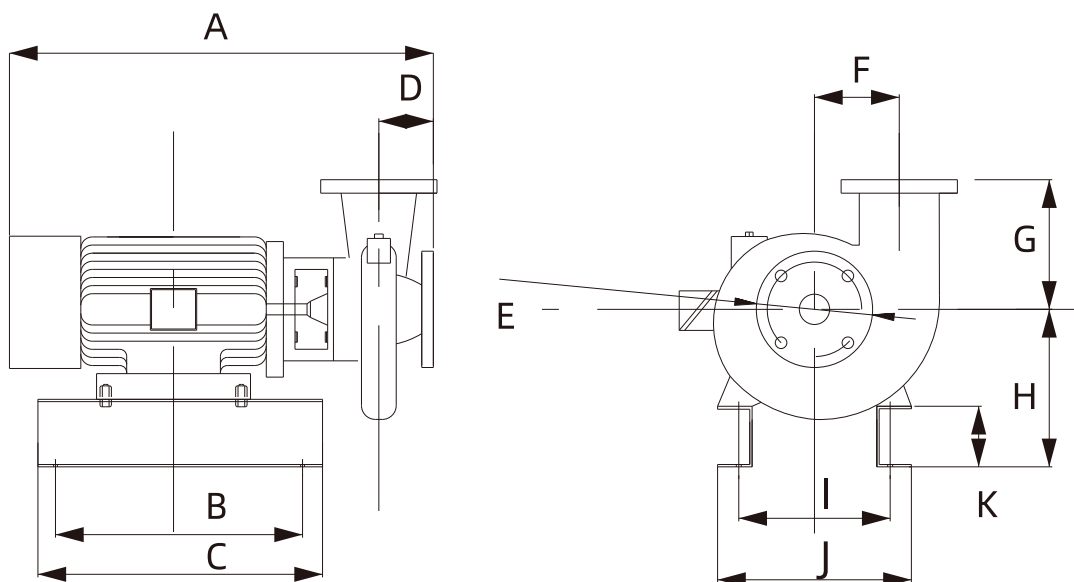


Model	Dimensions Diagram (Unit: mm)										
	A	B	C	D	E	F	G	H	I	J	K
QHS-25-1/2	350	204	235	45	96	70	107	130	125	160	50
QHS-25-1	355	204	235	45	96	70	107	130	125	160	50
QHS-40-1	355	204	235	45	96	70	107	130	125	160	50
QHS-40-2	405	204	235	50	120	80	106	140	140	175	50
QHS-50-2	405	204	235	50	120	80	106	140	140	175	50
QHS-50-3	415	235	265	50	120	80	106	140	140	175	50
QHS-65-3	430	235	265	65	150	85	158	140	140	175	50
QHS-65-5	480	264	300	70	150	100	154	162	190	225	50
QHS-80-7.5	526	264	300	70	150	100	154	182	216	250	50
QHS-80-10	536	264	300	70	150	100	154	182	216	250	50
QHS-100-7.5	550	264	300	74	210	106	163	182	216	250	50
QHS-100-10	740	348	400	86	210	122	167	210	254	300	50
QHS-100-15	740	348	400	86	210	122	167	210	254	300	50
QHS-100-20	740	348	400	86	210	122	167	210	254	300	50
QHS-125-15	756	348	400	92	250	128	210	210	254	300	50
QHS-125-20	756	348	400	92	250	128	210	210	254	300	50

QHS Installation Diagram


Used In Heat Exchanger

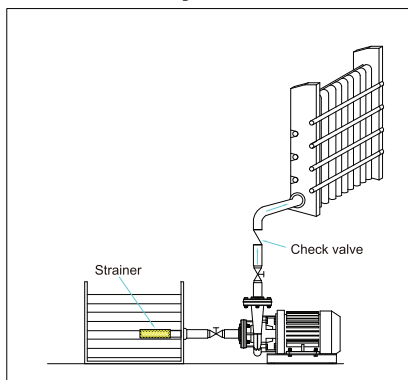


Used In Reaction Tank Or Filter Compressor

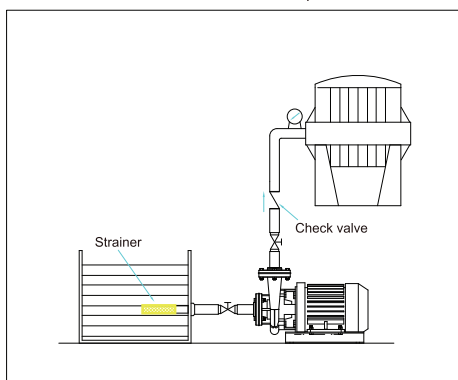


Used In Waste Gas Cleaning Tower

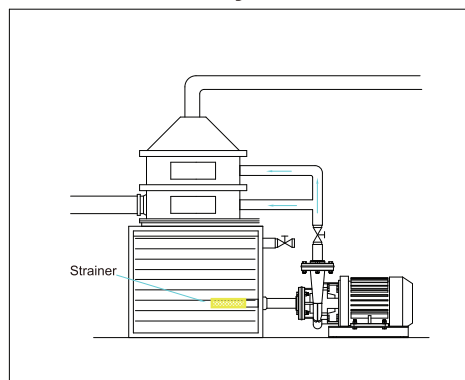

Installed Outside The Barrel

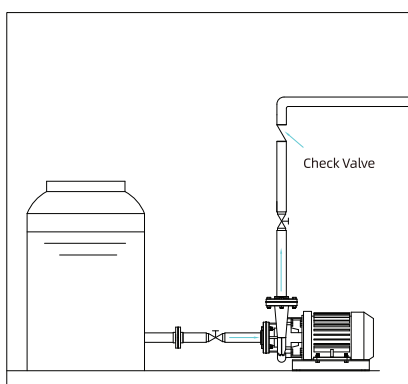

Warning: Incorrect use

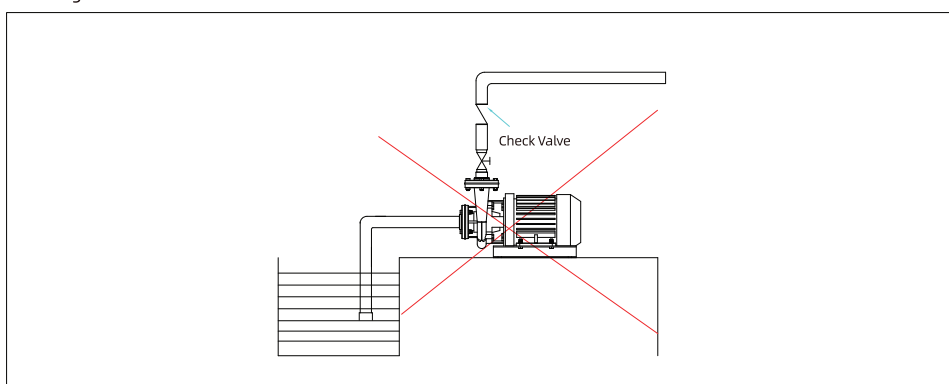

Attentions:

1. The pump shall be installed on a solid horizontal ground and kept stable. The pump inlet and outlet shall be equipped with valves for maintenance.
2. Try to avoid installing the machine in the outdoor area. Outdoor pump shall be covered with a protective cover. If the pump is equipped with an electronic controller, safeguard procedures shall be adopted.
3. The pump made of PVC material shall be protected from direct sunlight to prevent material embrittlement.
4. Before piping, different pipe fitting materials shall be selected according to the chemical liquid used, temperature conditions and delivery head to meet the actual requirements. For example, if the temperature is above 60 ° C, PP pipe fitting shall be selected for installation.
5. When piping, it shall be noted that there shall be no impurities or debris left in the pipe. If necessary, clean the pipe with clean water.
6. The flange joint shall be supplemented with gasket and locked to prevent air from being sucked into the pump.
7. If metal material is employed, shockproof joint shall be installed in the pipeline at the pump inlet and outlet to prevent the flange at the inlet and outlet from being broken.
8. When the pump conveying liquid exceeds a certain height, a check valve shall be installed at the outlet to prevent pump damage caused by back pressure.
9. The safety drain valve shall be installed between the pump outlet and the first on-off valve. It is better to install a pressure gauge to detect the pressure in the pipe.
10. Avoid suction of sundries and siphon effect, please add bottom valve (Ford valve).
11. Check valve shall be installed near the pump inlet and outlet as far as possible, and T-joint shall be employed when installing pressure gauge or safety discharge valve.
12. When piping, pay attention that the pipeline shall not be forcibly twisted. After installation, check whether the pump body is distorted due to excessive force or incorrect installation method.
13. After the machine is fixed, confirm whether it is firm, and rotate the motor fan to confirm whether the motor can rotate freely.
14. Before connecting the power cord, confirm whether the selected power supply matches the motor model, and connect the over-current protection switch.
15. If it is used for dangerous chemical liquid, the pump shall be covered with a protective cover.
16. Before starting the pump motor, fill it with liquid, check whether the inlet and outlet valves are open, and do not implement idling operation.
17. After installation, confirm whether the pipeline is firm again to avoid damage caused by vibration.
18. Before starting the power supply, check whether the inlet and outlet pipelines are correctly selected. For example: whether the inlet and outlet valves are opened, whether the pipeline flow path is correct, whether the liquid in the tank is normal and whether the pipeline is damaged, etc.
19. When operating liquid in dangerous environment, it is required to wear protective clothing, face shield and safety shoes and socks.
20. Check all kinds of protection switches. For example: whether the liquid switch, the liquid level controller in the tank and the power protection switch are in the normal operation position.
21. After starting the power supply, check whether the flow at the outlet is normal. If the flow is too small, stop the power supply immediately, and then check the inlet and outlet pipelines to address the problem.

1. High cost performance:

Independent production, stable quality and controllable cost.

2. Excellent product performance:

Corrosion resistance, idling resistance, no leakage, low noise, high efficiency, surface corrosion resistance, durable.

3. Advanced product technology:

Cooperate with colleges and universities to carry out production, learning and research activities, master cutting-edge technology, and constantly make breakthroughs in the direction of low energy consumption and high efficiency. At present, the unique technology includes: 4P motor magnetic pump addresses the problem of rapid temperature rise of liquid medicine, and intelligent monitoring addresses the problem of idling.

4. Continuous upgrading of materials:

Imported CFRETFE material is resistant to strong acid, strong alkali and high temperature.

5. Rich product categories:

It can be upgraded to replace all kinds of old equipment.

6. Three to five year extended warranty:

Make customers free from worry and labor cost.

7. Professional and efficient service:

Before sales, a strong technical team can help customers select models accurately and reduce waste; after sales, tailor training programs for customers to reduce human losses; 4-hour quick response and efficient service!

8. Strong qualification:

Patented technology, CE, SGS quality certification of European Union, government designated supplier

9. Flexible cooperation mode:

Welcome OEM customization and regional agents.

10. Unique family culture:

Stable and happy team, long-term and reliable cooperation.

**Why
choose
Qihua?**



The enterprise has been engaged in independent research and development since 2012. At present, it has possessed ten utility model patents, one appearance patent and two CE certificates. In addition, it is applying for three utility model patents and two invention patents, and plans to apply for more than 20 kinds of patents.

PART OF OUR SUPPLIERS

Your contribution is indispensable to the high quality products of Qeehua



PART OF OUR CUSTOMERS

Think what the customer thinks, and be grateful to every customer





WWW.QEEHUAPUMP.COM



WWW.QEEHUA-PUMP.COM

HEAD OFFICE IN SOUTH CHINA:

GUANGDONG QEEHUA INDUSTRY EQUIPMENT CO., LTD.

Address: No.8, East Chenwu Road, Houjie Town, Dongguan City, Guangdong Province, China.

SUBSIDIARY CORPORATION:

DONGGUAN EVER POPULAR IMPORT AND EXPORT CO., LTD.

No. 1301&1302, Tianan Cyber Park, No.1 Huangjin Road, Nancheng District,
Dongguan City, Guangdong Province, China.

SUBSIDIARY CORPORATION:

JIANGXI QEEHUA FLOW TECHNOLOGY CO., LTD.

Address: Room 110, Building 3, Hengke Industrial Park phase 1,
Economic and Technological Development Zone, Ganzhou City, Jiangxi Province, China.

SUBSIDIARY CORPORATION:

SUZHOU QEEHUA PUMP INDUSTRY CO., LTD.

Address: Room 221, Kezheng Building, No. 16, Nantiancheng Road, High - speed Railway New Town,
Xiangcheng District, Suzhou City.

SUBSIDIARY CORPORATION:

CHENGDU QEEHUA FLUID TECHNOLOGY CO., LTD.

No. 08, 3rd Floor, Building 3, No. 1108 Shengbang Street, High tech Zone, Chengdu City, Sichuan Province, China.



Copyright belongs to our company

Product specifications and technical indicators are subject to change without prior notice.

2025.09.20